



# Z200 SEBC

SOFT BAR CLAMP

BY

# URMOSI

# 720 SBC IS THE PRIME CHOICE OF HANDLEBAR CLAMPS

## 720 SBC Soft Bar Clamp System Installation

Watch our installation video on youtube - Robert Urmosi - Dirt Bike and ATV



**Premium Quality  
Anodized Surface Finish**



**Universal fit for most  
ATVs and Dirt Bikes**



**CNC- Machined from  
High-Strength Aluminum**



**Easy to Install**  
Takes less than 10 min to install



**Adjustable height  
front and back**  
The clamp can be mounted  
to be closer or away from  
the rider. Height can be  
adjusted with additional  
accessory spacers



The rubber insert is especially  
developed to give maximum  
flexibility and durability to  
eliminate arm pumps



## 720 SBC Soft Bar Clamps Adapter Kits For Different Types of ATVs

If you purchased any of these kits for your ATV, install the kit onto your steering stem before installing the 720 Clamp System.



**Yamaha YFZ450 Stock Steering Stem Adapter kit 4.5mm**

**Handlebar Riser Kit**  
Each block raises the handlebar 13mm  
(For ATV and Dirt Bikes.)



**Yamaha YFZ450 Aftermarket steering stem adapter kit. Houser, Walsh Steering System. Thickness: 10mm Distance between the center of the holes 99mm.**

**Yamaha Raptor 700 Adapter kit**  
**Thickness: 23.5mm**  
Apply semi-permanent thread locking fluid (Blue Loctite) when installing the adapter bolts.



## 720 SBC - Parts



1. Outer Lower Base Clamp
2. Outer Lower Base Clamp Bolts M10
3. Outer Upper Clamp
4. Outer Upper and Inner Clamp Bolts M8
5. Rubber Bushing
6. Inner Lower and Upper Clamps
7. Spacer Tool

Remove the current Handlebar clamp before installing your 720 SBC

# 1

### Outer Lower Base Clamp

Attach the outer lower base clamp to the triple clamp with (#2) bolts and washers.  
Apply semi-permanent thread locking fluid (Blue Loctite).



# 2

**Bolts 10mm x 90mm**  
Outer lower base clamp bolts and washers.



# 3

Place the handlebar in to the lower base clamps.



Bolts # 2 Hex wrench size: M10

# 4

### Outer Upper Clamp

Attach the outer upper clamp to the outer lower base clamp with (#4) bolts and washers.





# 5

**Bolts 8mm x 25mm**

Apply semi-permanent thread locking fluid (Blue Loctite) when installing bolts (#4).

Bolts # 4 Hex wrench size M6

# 6

**Rubber Bushing**


Place the rubber bushing on the handlebar and slide it into the outer clamps.



# 7

**Inner Lower and Upper Clamps**

Mount the inner lower and upper clamp onto the handlebar with (#4) bolts and washers, then slide it into the rubber bushings (Bolts should face up).

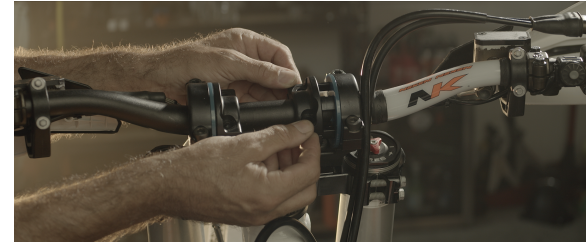


Slide #6 into the rubber bushings then place #7 between the two inner bar clamps then tighten all #4 bolts.



# 8

**Spacer Tool**

Place the spacer tool between the two inner clamps to set up the handlebar. Tighten the clamp bolts down. Torque to 24 lb. ft.

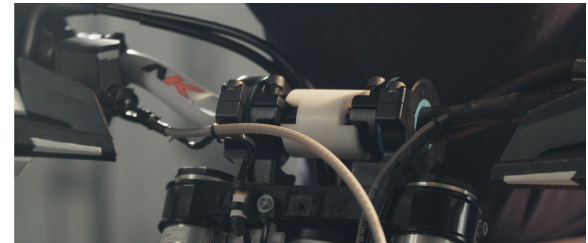

Enjoy Your Ride! - Robert Urmosi





**URmosi**